☑ Designed for high mechanical traffic, such as manual pallet jacks & forklifts.

☑ 2m long x 7cm wide (visible part), 11cm total width
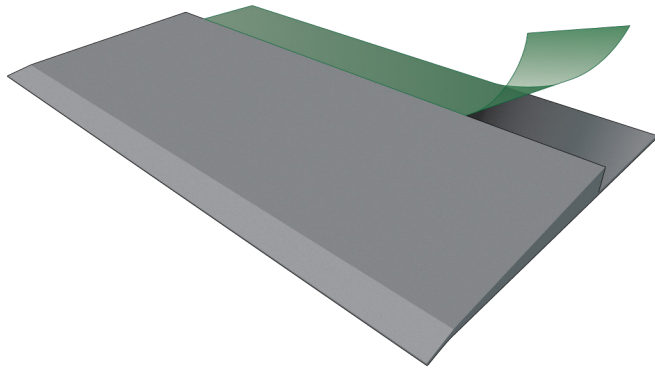
☑ Ready to install: pre-adhesive ramp (below the ramp & on the top)

☑ 100% flexible PVC: no scratch, no crack, floor defaults absorbtion

☑ Designed for 6 mm flooring

**TIME SAVING
NO STRESS**

(easy to install, easy to cut, no floor damage)

**LONG LIFE
MONEY SAVING**

(high resistance to damage from mechanical traffic)

**MATCHES STATICWORX
GROUNDLOCK EXTREME**

static**Worx**®

CUT: Use classic mitre shears

GLUE: Remove protective film from adhesive tape

EQUIPMENT NEEDED

Cutter with straight and hook blade

1. SURFACE PREPARATION

The ramp can be installed on various flooring surfaces, including: tile, concrete, resin, old PVC coverings.
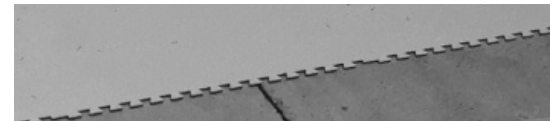
Before installing the ramp:

- Ensure that the surface is flat, smooth, soundly constructed and free from all contamination.
- Remove dust and grease from the area on which the ramp will be installed using an alcohol-based non-film forming degreaser.
- Use a roller to apply a universal primer to the floor area on which the ramp will be installed (drying time at least 2 h).

Cross section view ✖
Cross section view ✔
Front view
Level difference < 1mm
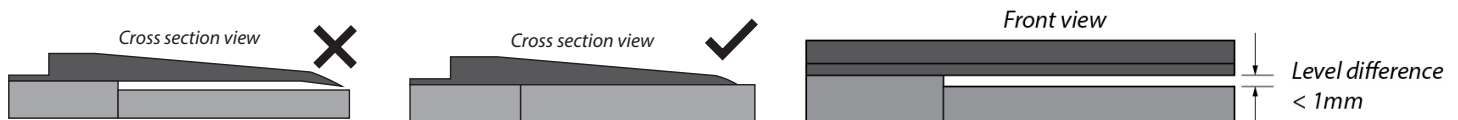
2. CUTTING THE TILES

- Draw a line using a rule or chalk line.
- Cut using the straight blade cutter, guillotine or circular saw.

3. INSTALLING THE RAMPS

A. For aligned profiles

- Measure then cut the required length using the mitre shears.
- If several lengths are necessary, be careful not to position the join between two ramps in the center of the traffic area. Instead have it offset on one edge.
- Remove the edge of the protective film from the adhesive tape intended to tape the tiles (upper part).
- Place the ramp against the tiles.
- Remove the rest of the protective film from the adhesive, pressing and sticking the tiles as you go.

IMPORTANT : The information in this document is valid from: 01/09/2020 and is subject to change without prior notice. We are continuously making technical improvements to our products; before starting any work, our customers should check with us that this document is still in force.

B. Profiles with 45°mitre cut

* In addition to the previous steps, make sure that you make the 45° mitre cuts using the appropriate mitre shears.
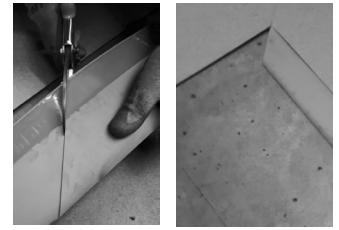
Regardless of the configuration, use the grooving tool between the tiles and ramps, as well as between each ramp joint.

* Gently lift the "tiles + ramps" assembly.
* Be sure the surface is clean.
* Next remove the protective film from the adhesive tape, placed under the ramp. Then press and stick the assembly down onto the surface.
* Smooth with the pressure roller for optimal and even adhesion.

DESCRIPTION		
Description		PVC ramp suitable for 6mm thick floor covering. It has pre-installed adhesive and can be removed without damaging the floor.
Installation		Adhesive to the floor and adhesive to the floor covering
Material		PVC
Shore A		87 +/-2
Weight	g/lm	583 +/- 30
Length	lm	2
Width	mm	Full width : 110 Visible width : 70
Overall thickness	mm	7.9
Packaging	lm/box	16 (8 lengths)
Color		Lead (dark gray)
Product code		0500

StaticWorx®
P.O. Box 1556,
Williston, VT 05495

617-923-2000
fax: 617-467-5871

staticworx.com

We Keep You Grounded